



Motorola Droid RAZR HD Battery Replacement

A guide to replacing the battery in your Motorola Droid RAZR HD.

Written By: Blake Nielsen



INTRODUCTION


Remember the days when your battery lasted days before dying? With this guide, you'll be able to replace your battery and regain the lost battery life.



TOOLS:

- [T4 Torx Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [SIM Card Eject Tool](#) (1)
-

Step 1 — Front Panel Assembly

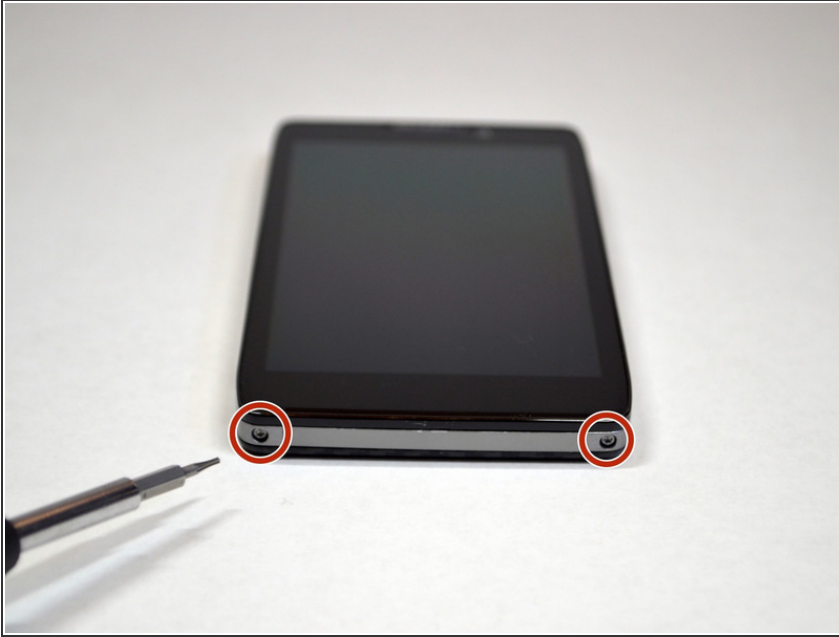


- ⚠ Power off the device before disassembly to avoid damage or harm from electrical surges.
- Remove the two 4.5mm screws in the bottom left and right corners of the device using a T4 Torx Screwdriver.

Step 2



- Holding the device in your hand, push the screen towards the top of the phone until it disconnects from the base of the phone.


Step 3

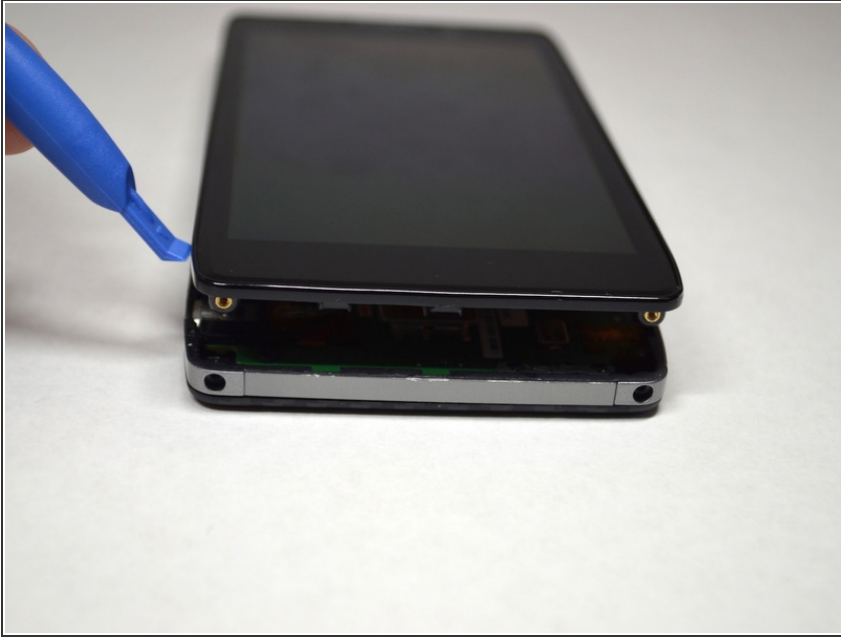

- Use a plastic opening tool to lift the screen from the phone.


⚠ Do not try to completely detach the screen; cables are still connected to the device and can be damaged.

Step 4

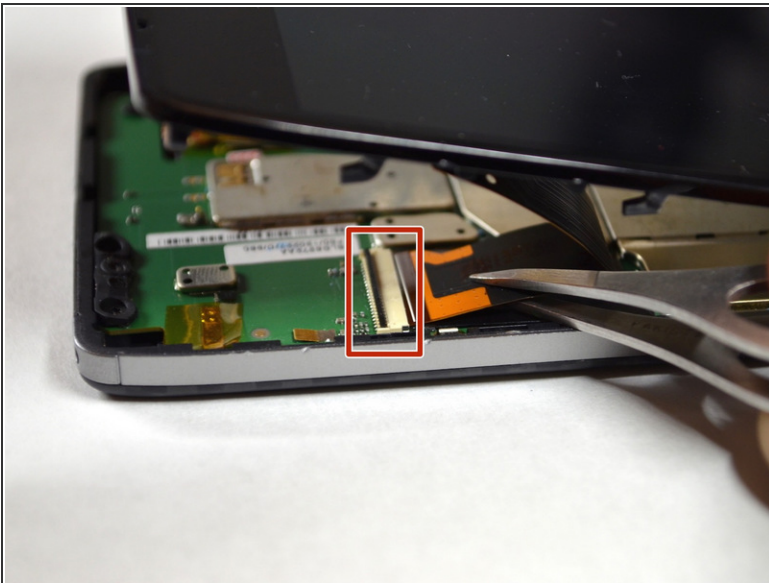


- Use tweezers to remove the yellow tape covering the lcd/digitizer cable connector.
 - Carefully lift up the black locking tab to release the lcd/digitizer cable.
- ⓘ The cable connector is located on the bottom right section of the phone.

Step 5

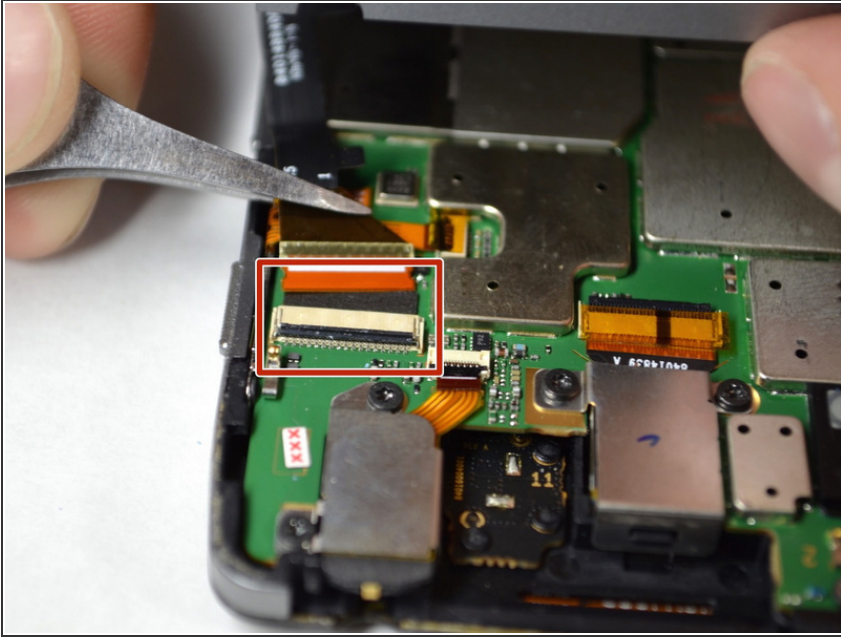



- Lift up the screen further to reveal another cable at the top of the device connecting the motherboard to the screen.
- ⓘ This connector is located on the top right section of the phone.
- Use tweezers to lift the black bar on top of the ZIF connector.
- Pull the ribbon cable out of the connector with tweezers.
- Now that there are no cables connecting the screen to the motherboard, remove the screen.


Step 6 — Rear Facing Camera

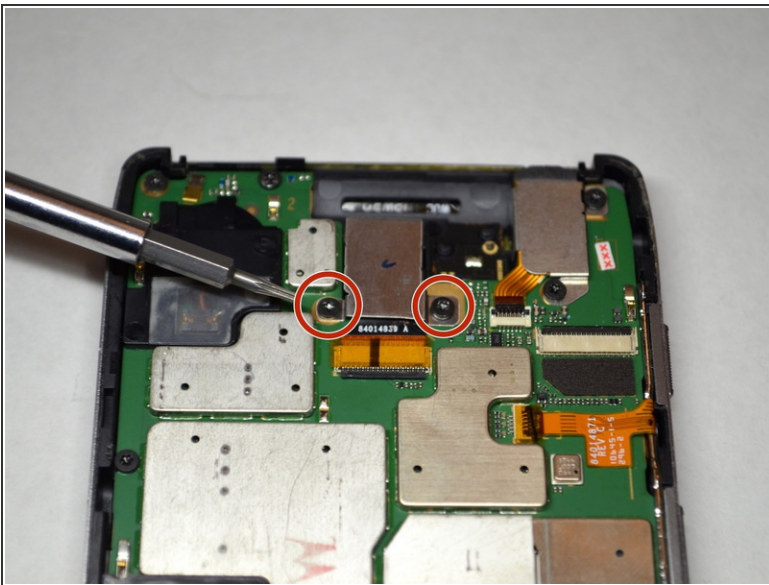


- Remove the two 3.5mm Torx T4 screws securing the rear facing camera.
- Using tweezers, remove the metal shield protecting the rear facing camera.

Step 7

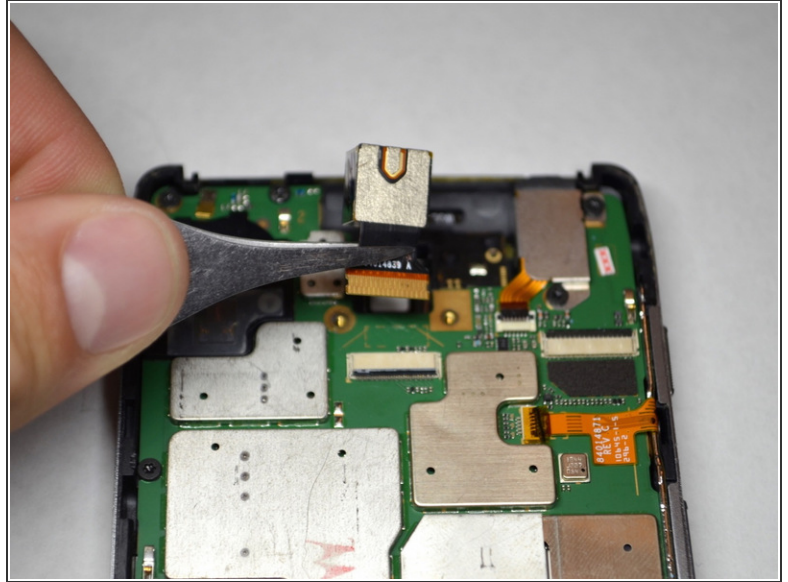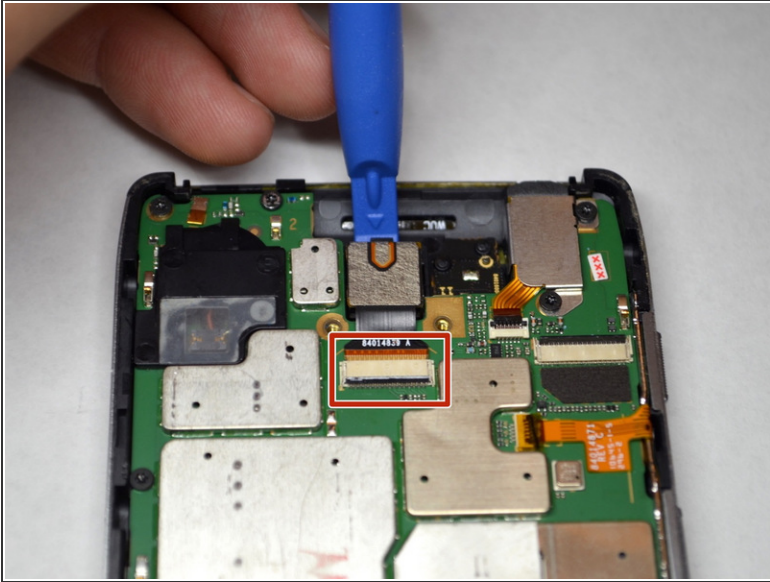


- Use a plastic opening tool to lift up the rear camera.
 - Use tweezers to lift and unlock the black bar on top of the rear camera's ZIF connector.
 - Pull the camera out of the connector.
-  You will need to unplug the rear camera from its connector on the motherboard.

Step 8 — Motherboard

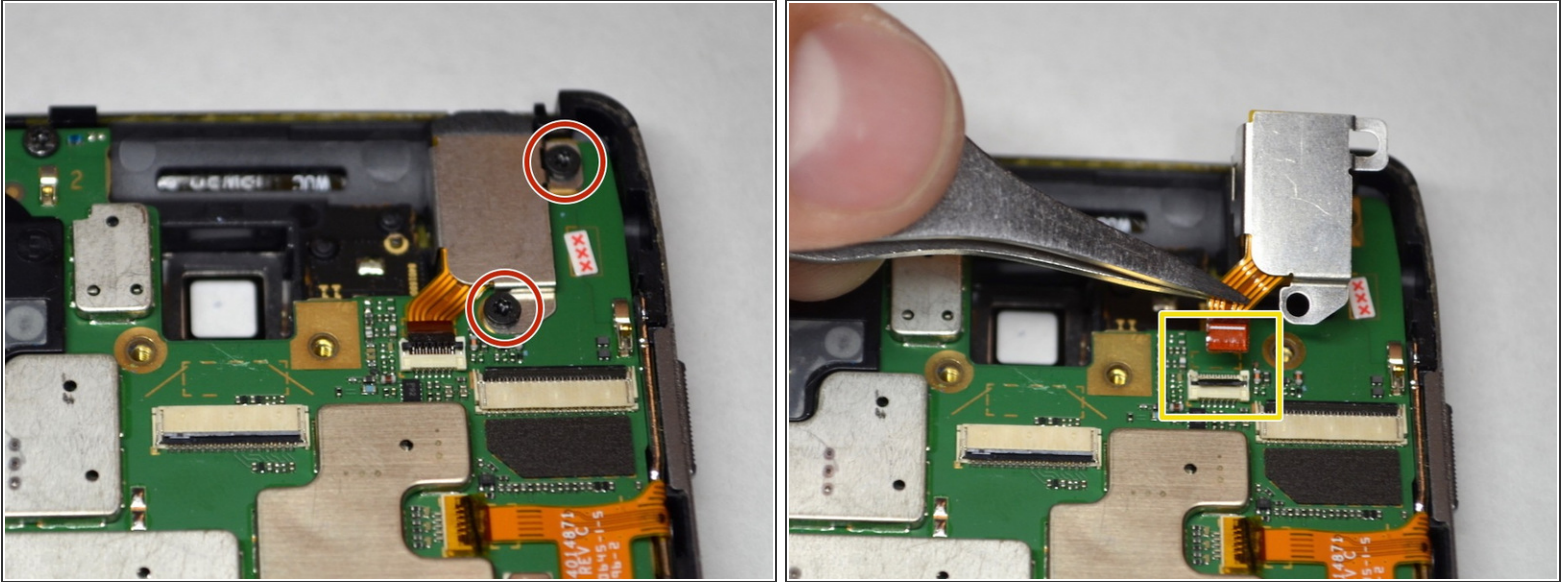



- Remove the two 3.5mm Torx T4 screws securing the headphone jack cable/cover.
- Using tweezers, disconnect the headphone jack cable/cover and remove it. The headphone jack will stay where it is.
- ❗ The metal shield is attached to the headphone jack.

Step 9

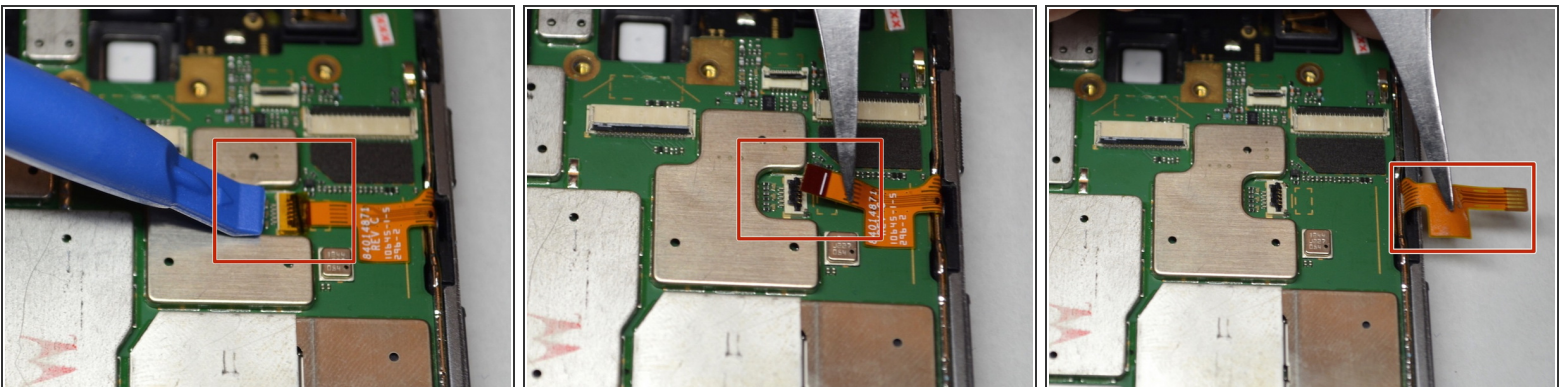



- Using a plastic opening tool or tweezers, disconnect the power button connector.
- Carefully peel back the adhesive cable with the tweezers so it is not in the way of the motherboard.

Step 10

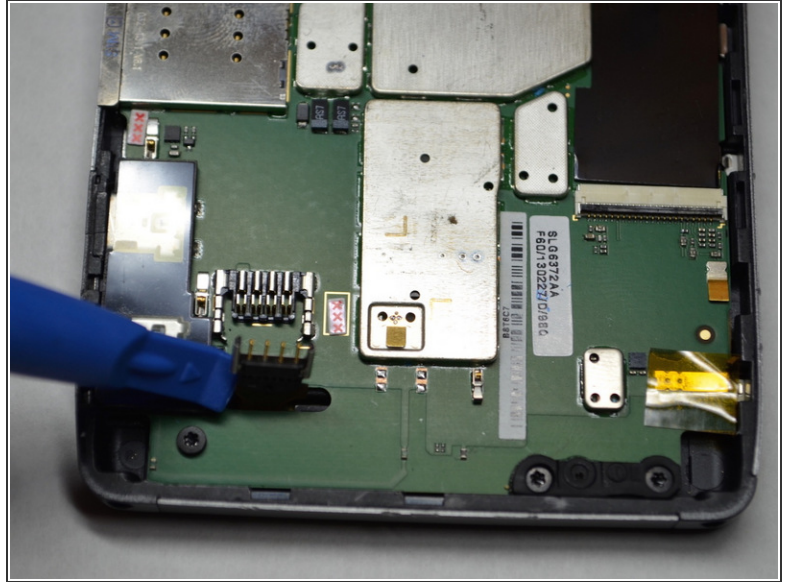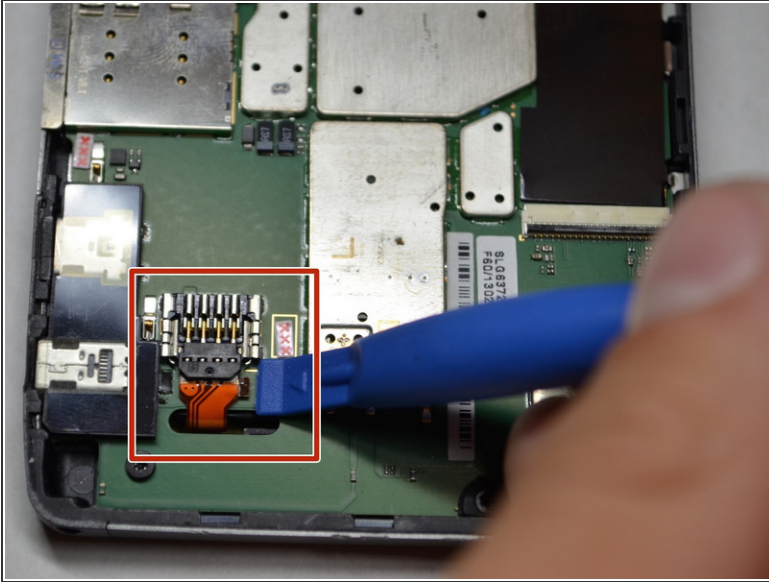


- Disconnect the battery from the motherboard by lifting up with the plastic opening tool near the base of the cable.
- Bend the battery cable straight up and out of the way of the motherboard.

Step 11

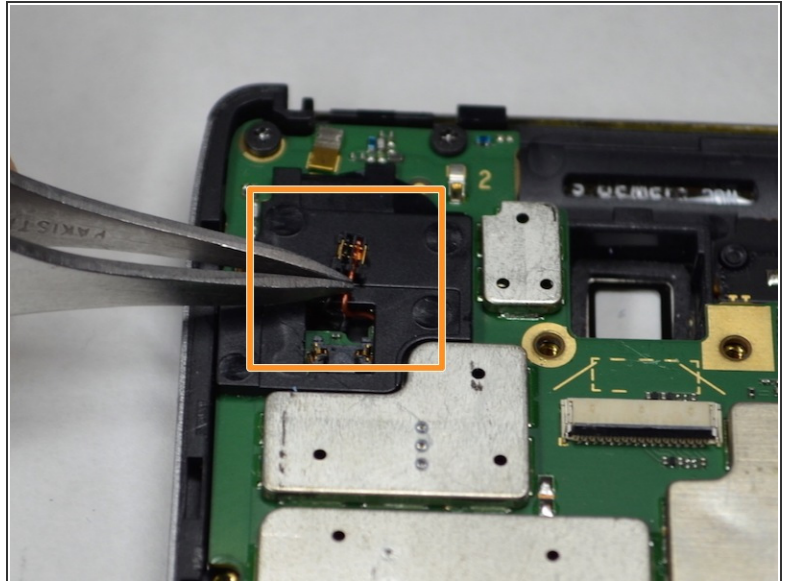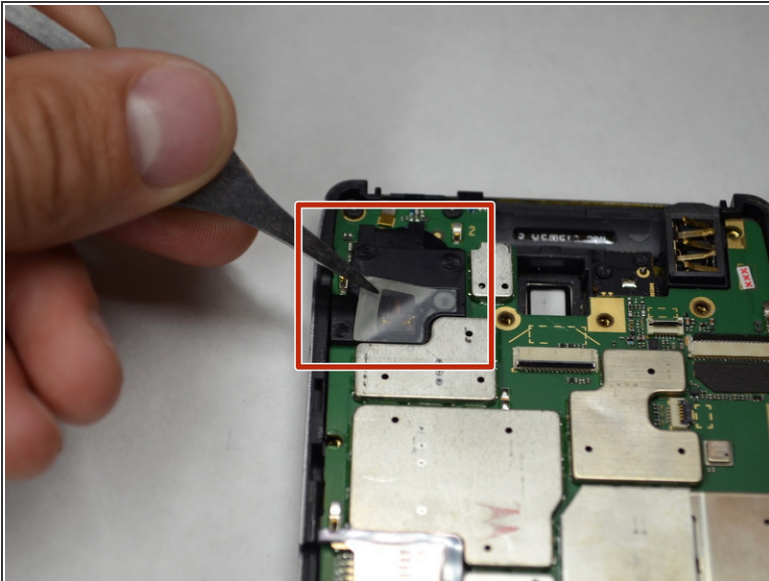


- Using tweezers, peel back the adhesive covering the speaker connector.
- Using tweezers, disconnect the speaker connector by lifting underneath the base of the connector.

Step 12

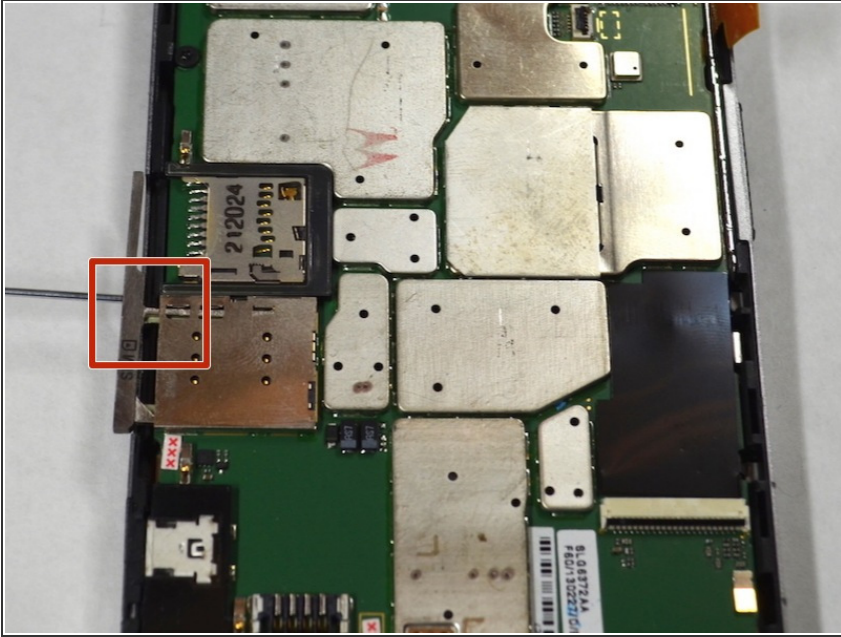

- Locate the sim card/micro sd tray on the side of the device.
- Push a small rod, such as a paper clip or sim card tool, into the opening to eject and remove the tray.

Step 13

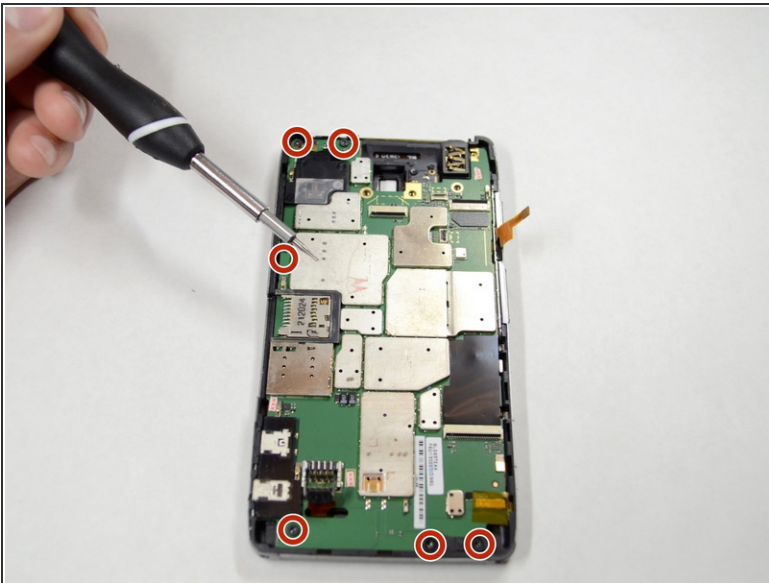

- Remove the six 3.5mm Torx T4 screws securing the motherboard to the device frame.
- Carefully pry up the motherboard from the frame using a plastic opening tool.
- ⓘ Watch for obstructions such as loose cables.

Step 14 — Battery



- Use a plastic opening tool to lift up the battery from the frame of the device.
- Remove the battery.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-31 07:02:53 PM.